

# INSTALLATION INSTRUCTIONS

## Floodguard FGX04



### VALVE SPECIFICATION

Max. Water Supply Temperature	85°C
Min. Water Supply Pressure	200kPa
Max. Water Supply Pressure	1000kPa
Shut-off Flow Rate	15.0 ± 1.5L/min

### INSTALLATION INSTRUCTIONS

(Must be installed in accordance with NCC Volume 3 (PCA - Plumbing Code of Australia))

**Step 1** – Flush water lines to ensure no debris will enter the valve.

**Step 2** – Ensure that the main water supply is turned off

**Step 3** – Screw the female end of the valve onto the male threaded wall outlet or inline fitting ensuring that the filter washer is secured against the male end.

**Step 4** – Actuate the valve, thus isolating the outlet and turn the main water supply back on, checking for leaks.

**Step 5** – Insert appropriately coloured indicator cap into the handle and the valve is now ready for the flexible hose to be installed.

### RESET INSTRUCTIONS

**Step 1** – Upon actuation of the integrated FloodGuard™ device, the valve will still be in the 'Open' position. To begin the reset procedure, rotate the handle to the 'Closed' position.

**Step 2** – When the valve is in the 'Closed' position, the integrated FloodGuard™ device will automatically reset.

**Step 3** – Once necessary inspection and repairs have been conducted, the valve can then be moved back to the 'Open' position.

### WARNING

If the valve closes under normal operating conditions, this is the result of high flow rates. To correct this, install a HydroSave Inline Flow Controller immediately downstream of the flexible hose. The FloodGuard™ valve will not prevent small leaks or drips. It is intended to function only in hose burst situations.

### WARRANTY

Reliance Worldwide Corporation reserves the right to modify designs and specifications and to withdraw and introduce products at any time without notice.

Installation is subject to the requirements of the applicable regulatory authority, the National Construction Code Volume Three – Plumbing Code of Australia, associated reference standards as applicable at the time and AS/NZS 3500. This product is compliant to the Lead Free requirements of the National Construction Code Volume Three. For further Scope of Use, please visit [www.rmc.com.au/resources](http://www.rmc.com.au/resources).

Reliance Worldwide Corporation (Aust.) Pty. Ltd. (RWC) will either replace or repair any defective goods where the defect arose as a result of manufacture for two (2) years (see website for more details). You may contact RWC at the phone number, address or e-mail shown and will be required to return the goods for evaluation. Should the defect be found to be one of our manufacture we will send you a replacement product to your stated address at our expense. Our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

® = Registered Trade Mark of  
Reliance Worldwide Corporation

© 2025 All rights reserved

### CUSTOMER SERVICE

AU 1800 810 803 | NZ 0800 800 523 | [sales.au@rwc.com](mailto:sales.au@rwc.com) | [www.rmc.com.au](http://www.rmc.com.au)