

RMC FloodGuard[™] Isolation Valve

Scope of Use / Specification Sheet

The RMC FloodGuard[™] Isolation Valve is designed for ease of installation with integrated loose nut connection. The inbuilt FloodGuard[™] will shut down water flow in the event of a hose or pipe burst.



FGX04

Product List	
Order Code	Size
FGX03	15mm
FGX04	15mm - Right Angled

Materials

Body	LF DZR Brass		
Spring	Stainless Steel		
O-Ring	Nitrile		
Handle	Aluminium		
Stem	Stainless Steel		
Nut	LF DZR Brass		
Indicator Cap	Polyethylene		
Internal Components	PSU		

Standards and Approvals



Features and Benefits

- Automatically resets after activation and repair
- Captive loose nut design
- Hot and cold indicator buttons
- Filter style washer
- Suitable for horizontal and vertical installations
- Integrated isolation

Applications

The RMC DN15 FloodGuard[™] Isolation Valve is designed to reduce the extent of flooding and water damage caused from a burst flexible hose. The captive loose nut design allows for quick and easy installation. Incorporating an isolation point with the FloodGuard[™] makes the product suitable for new or retrofit installations.





RMC FloodGuard[™] Isolation Valve

Technical Specifications						
	FGX03	FGX04				
Minimum water supply pressure	200kPa	200kPa				
Maximum water supply pressure	1000kPa	1000kPa				
Maximum water temperature	85°C	85°C				
Shut-down flow rate	15.0 <u>+</u> 1.5L/min	15.0 <u>+</u> 1.5L/min				
Inlet loose nut connection	G1⁄2	G1⁄2				
Outlet connection	G1⁄2 B	G1⁄2 B				

FGX03

L

Dimensions						
Product	L	н	w	I (inlet)	O (outlet)	
FGX03	73	54	34	G1⁄2	G1⁄2 B	
FGX04	79	71	34	G1⁄2	G½ B	

Note: All measurements in mm unless otherwise stated.







Reliance Worldwide Corporation (Aust.) Pty. Ltd. reserves the right to change any product specification or information contained in this publication at any time and without notice. All diagrams are illustrative only. Please consult OEM instructions and AS/NZS 3500 for all installations. ABN 71 004 784 301 | EPK0001 REV A

Т

0



RMC FloodGuard[™] Isolation Valve



Notes

If the valve shuts under normal operating conditions, this is due to excessive supply pressure above 1000kPa. To correct this, install a HydroSave Inline Flow Controller immediately downstream of the flexible hose. The FloodGuard[™] will not prevent any small leaks or drips. It is designed to function only in hose burst situations.

Scope of Use

Installation is subject to the requirements of the applicable regulatory authority, the National Construction Code Volume Three – Plumbing Code of Australia, associated reference standards as applicable at the time and AS/NZS 3500. This product is compliant to the Lead Free requirements of the National Construction Code Volume Three. For more information, please visit **www.rmc.com.au/resources**.

Warranty

Reliance Worldwide Corporation (Aust.) Pty. Ltd. (RWC) will either replace or repair any defective goods where the defect arose as a result of manufacture within the warranty period. You may contact RWC at the phone number, address or e-mail shown below for further information or to make a claim.

Visit **www.rmc.com.au/warranty** to view the warranty statement in full and for further important information.



rmc.com.au | 1800 810 803 | sales.au@rwc.com

Reliance Worldwide Corporation (Aust.) Pty. Ltd. reserves the right to change any product specification or information contained in this publication at any time and without notice. All diagrams are illustrative only. Please consult OEM instructions and AS/NZS 3500 for all installations. ABN 71 004 784 301 | EPK0001 REV A