CONTENTS:

2x HT1316-1 (HT VALVE INSULATOR LEFT)

2x HT1316-2 (HT VALVE INSULATOR RIGHT)

1X MX2691_A (MIX VALVE INSULATOR HALF PIECE LEFT)

1X MX2691_B (MIX VALVE INSULATOR HALF PIECE RIGHT)

10 x CABLE TIES

1x IS1178 (INSTALLATION INSTRUCTIONS)

Reliance Worldwide Corporation (Aust.) Pty. Ltd. ABN 71 004 784 301 27-28 Chapman Place, Eagle Farm, Qld Australia 4009

Customer Service

AU 1800 810 803 NZ 0800 800 523 sales.au@rwc.com sales.nz@rwc.com www.rmc.com.au




INSULATION KIT HT/MIX PRODUCTS (VC961)

Suitable for RMC HX / HTX / MIX15X Valves


IS1178 REV - August 2025 (ECO-011916)

HOW TO INSTALL VALVE INSULATION

EXPANSION CONTROL VALVE

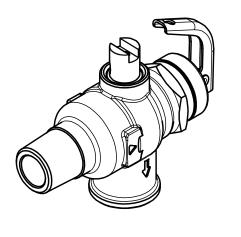


2 FIT 2 PIECES OF EXPANSION VALVE INSULATION AROUND VALVE

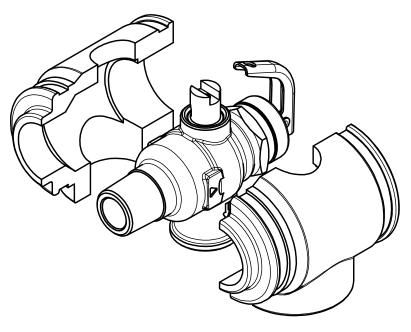


SECURE INSULATION BY WRAPPING THE SUPPLIED ZIP-TIES AROUND THE GROOVES AS INDICATED BY ARROWS


NOTE: Lift lever to check operation of valve and then ensure that the lever returns to the closed position

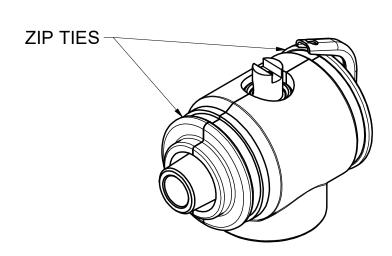


1 MIX VALVE

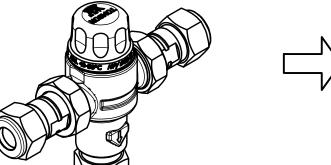

2 FIT 2 PIECES OF MIX VALVE INSULATION AROUND VALVE

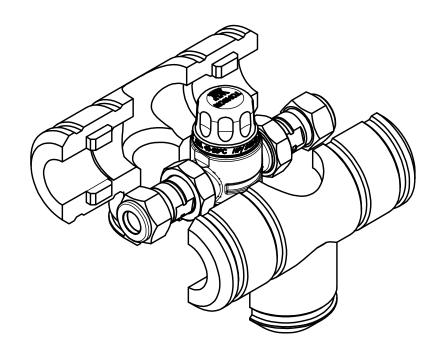

3 SECURE INSULATION BY WRAPPING THE SUPPLIED ZIP-TIES AROUND THE GROOVES AS INDICATED BY ARROWS

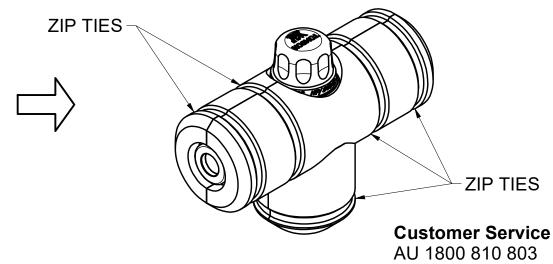

Customer Service AU 1800 810 803 NZ 0800 800 523 sales.au@rwc.com sales.nz@rwc.com www.rmc.com.au